

System operating instructions.

Door intercom system:

- (1) Enter the valid call number of the required flat & press "call" on the external door unit.
- (2) Answer internal telephone when called, & speak to front door via handset.
- (3) Should you require to release the front door, press the button marked with a key.
- (4) Green light will illuminate on external front door unit & door will be released for 5 seconds.

Door access system :

To enter the building.

- (1) Offer proximity device towards the reader on the external unit of the locked door.
- (2) A green light will illuminate on a reader to register a valid card.
- (3) Door will release for 5 seconds.

To exit the building.

- (1) Press the green button marked "press to exit" adjacent to the door.
- (2) Door will be released for 5 seconds.
- (3) In the unlikely event of system failure, press the green emergency break glass unit marked "emergency break glass" adjacent to the door.
- (4) The door will be permanently unlocked until the emergency break glass is replaced